

CHILLED WATER COIL PIPING DETAIL

(VARIABLE FLOW THROUGH COIL, FAIL TO NO COOLING)

SCALE: NONE

NOTES:

- 1. SEE SHEET 10 FOR STACKED COIL PIPING.
- 2. SEE SHEET 11 FOR DESIGN NOTES.

KEYED NOTES

- 1 INSTALL BALANCING VALVE WITH MINIMUM OF 3 STRAIGHT PIPE DIAMETERS UPSTREAM AND 1 STRAIGHT PIPE DIAMETER DOWNSTREAM.
- 2 MAINTAIN 6" MINIMUM CLEARANCE ABOVE TEST PLUG TO ALLOW GAUGE TO BE INSERTED. DON NOT COVER PLUG WITH INSULATION.
- (3) INSTALL SWING JOINTS AT COIL CONNECTIONS.
- 4 CONNECT BRANCH LINES FROM COIL INTO TOP OR SIDE OF SUPPLY & RETURN MAINS. CONNECTING INTO BOTTOM OF MAIN IS NOT ACCEPTABLE.
- 5 INSTALL MANUAL AIR VENTS IN SUPPLY & RETURN COIL BRANCH PIPING AS FOLLOWS:
 - A) IN PIPING HIGH POINT WHEN PIPING IS ABOVE MAIN.
 - B) CLOSE TO COIL WHEN PIPING NOT ABOVE MAIN (SIDE CONNECTION).

